


advanced FLOW engineering

Instruction Manual P/N: 54-13020C

Magnum FORCE Stage-2 Cold Air Intake System Cover

RAM 1500 (DT) 2019-2021 V6/V8

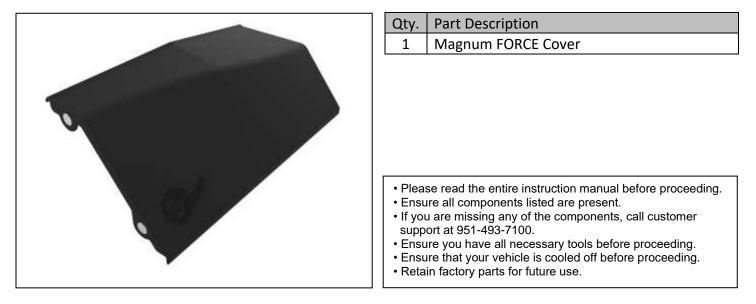

- 1. Remove the trim seal from your aFe POWER Cold Air Intake System
- 2. Install your new cover, ensuring the magnets are on the inside of the sheet metal housing and the longer edges sit on the outside.

NOTE: Check all screws, clamps, and connectors are secure after 100-200 miles