



Silver Bullet

Throttle Body Spacer


PN 46-34011

Important!

Please verify that all parts on the Parts List are included before you begin the installation.

Make	Model	Year	Engine
Chevrolet	Corvette Stingray (C7)	2014-2019	V8-6.2L
Chevrolet	Camaro SS	2016-2019	V8-6.2L
Chevrolet	Silverado 1500	2014-2019	V8-6.2L
GMC	Sierra 1500	2014-2019	V8-6.2L
GMC	Yukon/Yukon XL	2015-2019	V8-6.2L
Cadillac	Escalade	2015-2019	V8-6.2L

1. Disconnect the two crankcase hoses from the air intake tube. Using an 8mm nut driver, loosen the two hose clamps on the intake tube. Remove the intake tube from the vehicle.
2. Disconnect the wiring harness at the throttle body. Using a 10mm socket and driver, remove the four (4) screws securing the throttle body. Set the throttle body and the four (4) screws aside.
3. Slide the *aFe Silver Bullet* Throttle Body Spacer and orient it with the word "TOP" facing out and up. Place the gasket in-between the *aFe Silver Bullet* Throttle Body Spacer and the throttle body.
4. Use the four (4) factory screws previously removed to secure the throttle body to the intake manifold. Torque the screws to 88 in/lb. DO NOT OVERTIGHTEN THE BOLTS!
5. Reinstall the intake tube, tighten the two clamps, and reconnect both of the crankcase hoses.

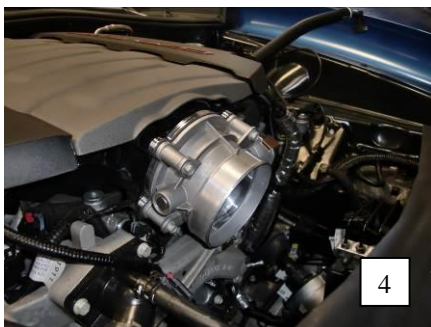

Parts List

- 1 *aFe Silver Bullet* Spacer
- 1 spacer gasket

Tools List

- 8mm nut driver
- 10mm socket & driver

advanced FLOW engineering, Inc.

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7134 OR email Tech@afepower.com (send photos if helpful)

All other type of calls, please call our main line at 951-493-7100

www.aFePower.com

Revised: 03-06-2019 GC