



INSTALLATION INSTRUCTIONS

MAKE: Chevrolet
MODEL: Corvette (C6)
YEAR: 2005-2013
ENGINE: V8-6.0L/6.2L (LS2/LS3)



RACE ONLY DISCLAIMER

This is a Race Only product that is to be used solely for competition, it cannot be used on vehicles that are operated on public streets, roads or highways. Its use is limited to closed-course and open-course racing that is formally sanctioned by a recognized racing organization. Any other use, including recreational off-road use, could be in violation of local, state and federal laws. A competition acknowledgement / liability release form must be filled out and submitted.

PFADT Series
P/N: 48C34101 Headers
P/N: 48C34104/08-YC/YN X-Pipe
P/N: 48-34105/09-YC/YN Combo



Parts Included

48C34104/8-YN/YC

- 2.5" Band Clamp (x2)
- O2 Sensor Extension 30" (x2)

48C34104/8-YC Only:

- O2 Sensor Extension 28" (x2)
- Bent Retention Clip (x2)
- Flat Retention Clip (x6)
- 5" Fire Sleeve (x2)


Parts Included

Header:

- Bolt, M8 x 1.25 x 25mm (x12)
- V-Band Clamp (x2)
- Threaded Plug
- Exhaust Set Gasket

CAUTION: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. aFe recommends professional installation on our products.

1. Disconnect the battery from the vehicle.
2. Securely support the vehicle on a lift or on jack stands with at least 24 inches of clearance from the frame rail to the ground.
3. Remove the plastic fuel rails covers (or Plastic shroud on the ZR1 models).
4. Remove the spark plug wires and spark plugs to avoid damaging them during installation.
5. Remove the oil dip stick. (if equipped)
6. Disconnect the primary and secondary O2 sensors from the engine wiring harness. (Primary O2 sensor connectors are black, Secondary are gray)
*If equipped: Remove the two dry sump lines from the passenger side of the pan approximately 9 quarts of oil will drain from the sump system. Be sure to have 10 quarts of fresh oil handy after new header install.
7. Remove the mid-pipe hanger springs to the mid-pipe. Also remove the bolts and nuts attaching the mid-pipe and cat pipe.
8. Loosen the O-band clamps connecting the mid-pipe to the over axle, then remove the OE mid-pipe from vehicle.
9. Remove the nuts securing the cat pipe to the exhaust manifold and remove the cat pipe. (raise the engine with a floor jack if necessary)
10. Remove the nuts securing each exhaust manifold to the cyl head.
11. Remove OE manifold gaskets from vehicle.
12. Clean surface of cyl head to avoid debris catching with installing new header system.
13. Remove primary and secondary O2 sensors from OE exhaust.
14. Install the provided O2 sensor extensions to the engine wiring harness. (For Catted Systems please make sure your O2 sensors wires do not touch exhaust)
*If the vehicle is equipped with oil cooler mounted on the driver side of the oil pan it must be removed for header installation.
15. Install driver side header from the bottom of the vehicle. (It may be necessary to raise the engine slightly to allow enough clearance to fit the header between the sub-frame and the side of the block.
*If the oil cooler was removed in previous step, reinstall it at this time.
16. Install passenger side header from the bottom of the vehicle. Do not install header bolts at this time; just leave the headers sitting in place.
17. Install the header gaskets using the provided header bolts.
18. Install one primary O2 sensor (Black Connectors) in each header. (If a wide-band sensor will be used, install it in the extra bung in the passenger side header)
19. Connect the primary O2 sensors to the extensions installed previously and tuck the wires out of the way of the headers.
*If the Pfadt Tri-Y exhaust system has catalytic converters, install the secondary O2 sensors (Grey Connectors) using the extensions. Then install fire sleeve over extensions (See photos below). If the exhaust system does not have catalytic converters you will no longer need the secondary O2 sensors.

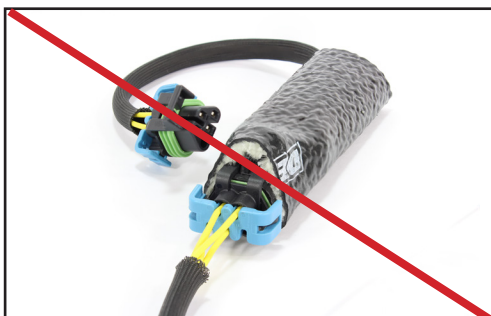

Incorrect



Correct



INSTALLATION INSTRUCTIONS

MAKE: Chevrolet
MODEL: Corvette (C6)
YEAR: 2005-2013
ENGINE: V8-6.0L/6.2L (LS2/LS3)



RACE ONLY DISCLAIMER

This is a Race Only product that is to be used solely for competition, it cannot be used on vehicles that are operated on public streets, roads or highways. Its use is limited to closed-course and open-course racing that is formally sanctioned by a recognized racing organization. Any other use, including recreational off-road use, could be in violation of local, state and federal laws. A competition acknowledgement / liability release form must be filled out and submitted.

PFADT Series
P/N: 48C34101 Headers
P/N: 48C34104/08-YC/YN X-Pipe
P/N: 48-34105/09-YC/YN Combo



Parts Included

48C34104/8-YN/YC

- 2.5" Band Clamp (x2)
- O2 Sensor Extension 30" (x2)

48C34104/8-YC Only:

- O2 Sensor Extension 28" (x2)
- Bent Retention Clip (x2)
- Flat Retention Clip (x6)
- 5" Fire Sleeve (x2)

Parts Included

Header:

- Bolt, M8 x 1.25 x 25mm (x12)
- V-Band Clamp (x2)
- Threaded Plug
- Exhaust Set Gasket

CAUTION: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. aFe recommends professional installation on our products.

20. Slide the provided O-band clamps onto the rear ends of the mid-pipe and slip the mid-pipe onto the overaxle. (Leave clamps loose)
21. Install the mid-pipe hanger bolts through the holes in the hanger bracket and install the nuts.
22. Align the V-band flanges on the headers to the mid-pipe and install the V-band clamps. (Do not tighten but loose enough to avoid flanges from slipping out)
23. Re-connect secondary O2 sensors to the extensions installed previously.
24. Route the O2 sensor wires at the corners of the transmission tunnel and secure them in place with the retention tabs included in the kit. (3 per side) **See Photo below.**
25. Torque the header bolts. Begin with the center and work your way toward the outside bolts.
26. Torque the O-band clamps at the rear of the mid-pipe.
27. Torque the V-band clamps.
Re-install Dry Sump lines if equipped at this time. Re-install dipstick tube if required in the previous step.
28. Reinstall spark plugs and wires.
29. Double check all fasteners have been tightened, wiring is not dangling on headers.
30. Re-connect the battery.

