




INSTALLATION INSTRUCTIONS

MAKE: Volkswagen
MODEL: Golf TDI
YEAR: 2011
ENGINE: L4-2.0L
WHEELBASE: 101.5"

2.5" Cat-Back
49-46402 (409 SS)
4 Door Only

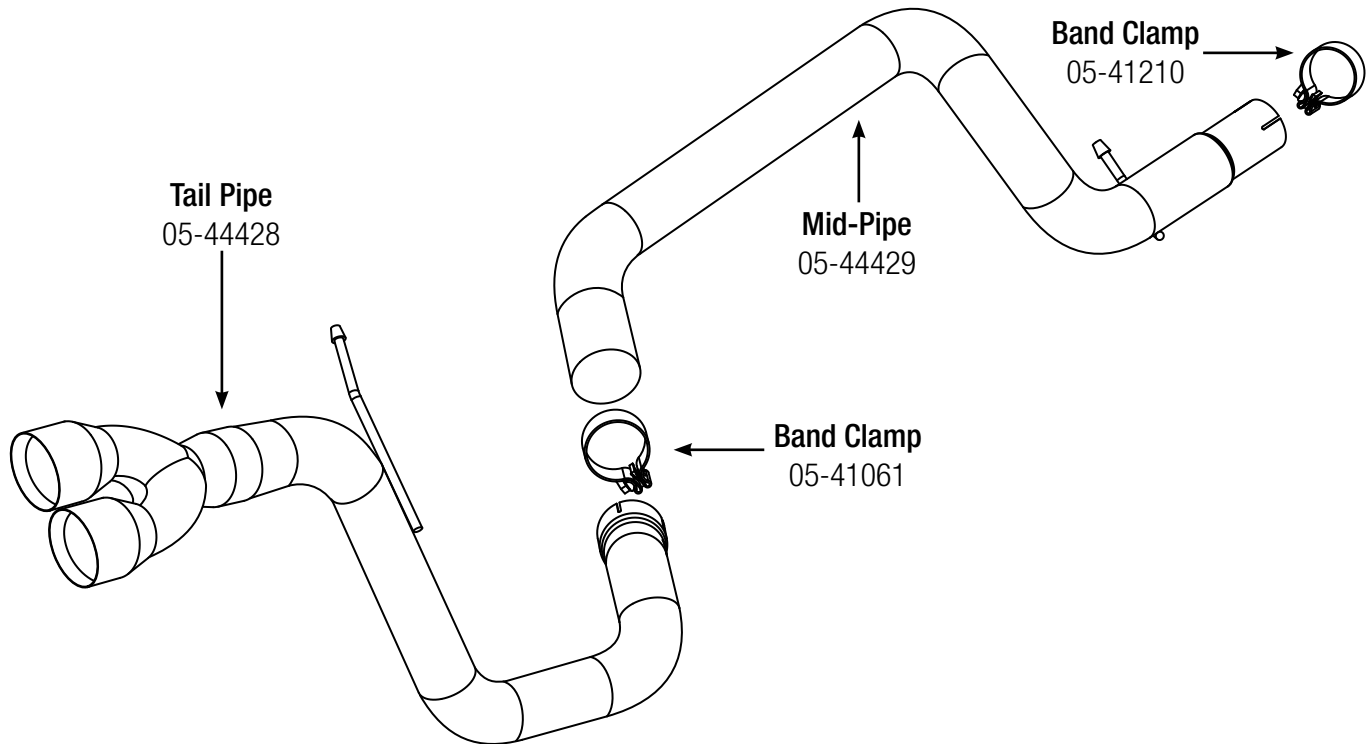

Step 1: (Read Instructions prior to installation) Remove your stock exhaust from the rear of your vehicle working your way forward. **It is recommended to not fully tighten the clamps until the entire system has been installed.**

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install the Mid-pipe assembly using the existing isolation mounts and the supplied 2-1/4" wire clamp provided.

Step 4: Install the Over axle tailpipe using the existing isolation mounts and the supplied 2-1/2" band clamp.

Step 5: Now fully tighten the turbo band clamp. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**